INSTRUCTIONS

TO BEGIN

1) Plug the computer into a 120 volt source.
2) Boot up the computer, wait until it has completed the start-up process.
3) Plug in the KeyRig 49 key board. (There is an ON/OFF switch at the back.)
4) Plug in the M-Audio sound card. (There is an ON/OFF switch at the back.)
5) Plug in the mouse.
6) 6) Connect the M-Audio sound card to the concert hall sound system. (The wires are provided by FX.)
7) Key board + the Centre Marcel-Dulude console……Adjust all of the cursors to ¾ (70%).
8) Plug the ear phones into the M-Audio sound card.
9) On the computer desk double-click on the Live software short-cut situated in the middle of the screen to bring up the sounds for the play.
10) Try to activate the sound using the keyboard. If this works ignore step number 11.
11) If you hear no sound when using the keyboard use the headphones to verify if the sound is audible on the M-Audio sound card.
    a. If sound is only detectable through the headphones you must ask the FX techniciens to correct the problem.
    b. If there is no sound detectable through the headphones of the sound card check all of the computer connections and make certain that the Power plug of the sound card is completely inserted.
    c. If there is still no sound after having done all of the above see Preference Settings of software LIve

SHUTTING DOWN THE SYSTEM

1) Shut down the software. When requested by computer, register all modifications if required.
2) Shut down the computer and be sure it has completely closed down.
3) Unplug the keyboard, the mouse and the sound card, etc.
4) Pack up everything. N.B. It is very important to not leave any equipment behind because it can easily be stolen.

IN CASE OF EMERGENCY : Pierre Saint-Georges, 514-713-2379

Preference Settings

Access to the various settings required to bring up and activate Live can be found in the Live Preference window which is in Preferences Options menu.

1) The Audio tab is used to adjust the Audio connections of Live to the outside via an audio interface. *Adjust the connections according to the indicator below* :

TAB
AUDIO

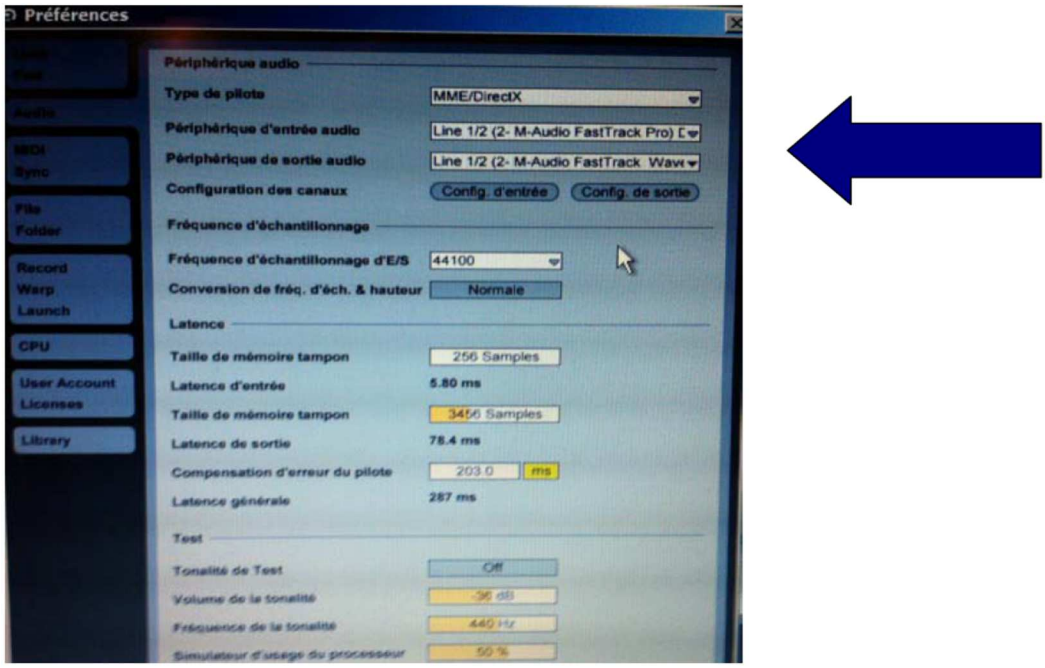

2) *The* Midi\Sync tab is used to help Live recognise the equipment or Midi peripherals.

Adjust the connections according to the indicators below :

TAB
MIDI/SYNC

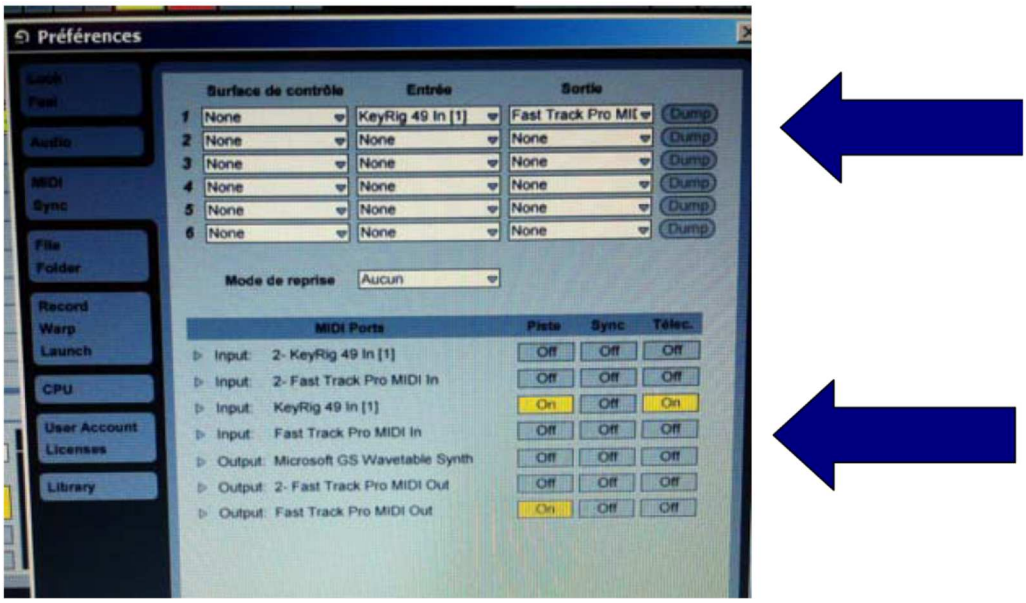

IN CASE OF EMERGENCY : Pierre Saint-Georges, 514-713-2379